

HOYA CORPORATION
PENTAX Imaging
Systems Division

PENTAX Europe GmbH
(European Headquarters)

PENTAX U.K. Limited

PENTAX France S.A.S.

PENTAX (Schweiz) AG
Bulgaria

Croatia

Czech Republic

Denmark

Estonia

Finland

Greece

Lithuania

Latvia

Poland

Portugal

Sweden

2-36-9, Maeno-cho, Itabashi-ku, Tokyo 174-8639, JAPAN
(<http://www.pentax.co.jp/>)

Julius-Vosseler-Strasse, 104, 22527 Hamburg, GERMANY
(HQ - <http://www.pentaxeurope.com/>) (Germany - <http://www.pentax.de>)
Hotline: 0180 5 736829 / 0180 5 PENTAX - Austria Hotline: 0820 820 255 (<http://www.pentax.at>)

PENTAX House, Heron Drive, Langley, Berks SL3 8PN, U.K.
(<http://www.pentax.co.uk>) Hotline: 0870 736 8299

112 Quai de Bezons - BP 204, 95106 Argenteuil Cedex, FRANCE
(<http://www.pentax.fr>) Email: [http://www.pentax.fr](mailto:info@pentax.fr) / photo/contact.php?photo&contact
Hotline: 0826 103 163 (0,15€ la minute) Fax: 01 30 25 75 76

Widenholzstrasse 1, 8304 Wallisellen, Postfach 367, 8305 Dietlikon, SWITZERLAND (<http://www.pentax.ch>)

VIP Trading Ltd. Stara Planina St. 15. 1000 Sofia

Distribuiranje ili kopiranje bilo kojeg dijela ove upute bez izričitog odobrenja poduzeća NEO ORBIS d.o.o. predstavlja povredu zakona.

Sva prava zadržana. Rok osiguranog servisa i rezervnih dijelova je sedam godina od dana kupnje.

Ovlašteni distributer: NEO ORBIS d.o.o. - Zagrebacka 145 b. 10370 Dugo Selo

e-mail: info@pentax.hr - www.pentax.hr

Ovlašteni servis: INFODATA - CMP Savica Šanci 111. 10000 Zagreb - e-mail: servis@pentax - tel. 01 / 2409-140

PENTEC s.r.o. Veleslavinska 19/30, 162 00 PRAHA 6 (Internet:www.pentax.cz)

Westheimer A/S - Erhvervsvej 30, DK-2610 Rødovre
Phone number: +45 4485 3400 - Email address: info@westheimer.dk - Website: www.westheimer.dk

Nordic Digital AS - Tööstuse tee 6 - Tõrvandi alevik, Ülenurme vald - Tartumaa 61715
e-mail: info@pentax.ee - www.pentax.ee - Telefon: +372 7337700

Focus Image Nordic Oy
Pakkalankuja 7, 01510 Vantaa - Tel. 09 4730 8451 - E-mail: info@focusnordic.fi - Web: www.focusnordic.fi

ΣΑΛΚΟΦΩΤ Α.Ε./ Ελλάδα - Σταδίου 43, 105 59 Αθήνα, τηλ. 210 3217 506
Βενιζέλου 15, 546 24 Θεσσαλονίκη, τηλ. 231 0278 600 - e-mail: salkath@otenet.gr - www.salkofot.gr

Vilbros prekyba UAB - Svitrigailos 11 B. 3228 Vilnius

SIA Elkor Trade - 201., Brīvības str. 1039 Rīga

Apollo Electronics, Ul. Szyszkowa 35/37, 02-285 Warszawa

Exija Garantia do - Representante oficial - Beltrão Coelho, S.A.

Focus Trading AB - Laxfisksvägen 16, S-433 38 Partille
Tel: +46 (0)31 336 23 00 - E-mail: info@focustrading.se - Web: www.focustrading.se




- PENTAX and Optio are trademarks of HOYA CORPORATION.
- Specifications and external dimensions are subject to change without notice.

AP028550_MULTII II

Copyright © HOYA CORPORATION 2009
FOM 01.06.2009 Printed in Europe


PENTAX

Digitaalkamera Optio E75

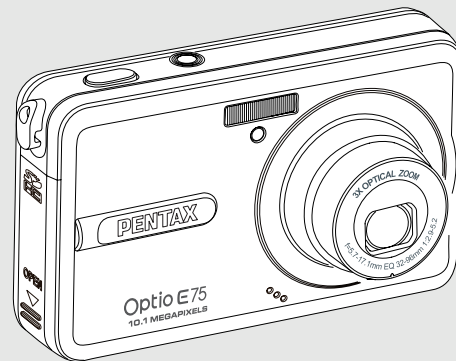


Kasutusjuhend

Pildistamine

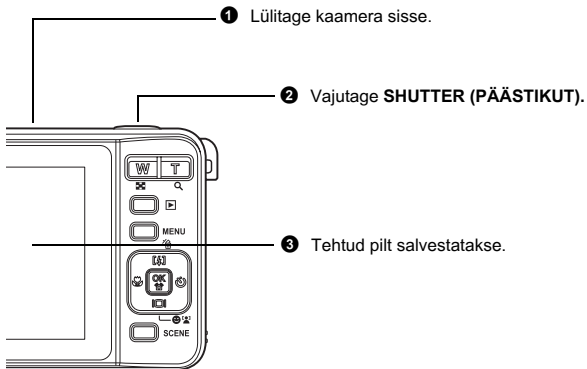


Videolõigu salvestamine




 


- 1**  Videorežiimi valimiseks vajutage **SCENE** nuppu.
- 2** Vajutage korra **SHUTTER (PÄÄSTIKUT)**.
- Videosalvestus algab.
 - Salvestamise lõpetamiseks vajutage uuesti **SHUTTER (PÄÄSTIKUT)**.
- 
- The diagram illustrates the process of selecting a video mode. On the left, a line drawing of a camera's control panel shows buttons for 'W' (Wide), 'T' (Tele), 'MENU', 'OK', and 'SCENE'. A line connects the 'SCENE' button to the first step of the instructions. To the right, a screenshot of the 'Video' menu is shown, featuring a grid of 20 icons representing different video modes. The bottom-right icon, which depicts a video camera, is highlighted with a white border, indicating it is the selected mode.

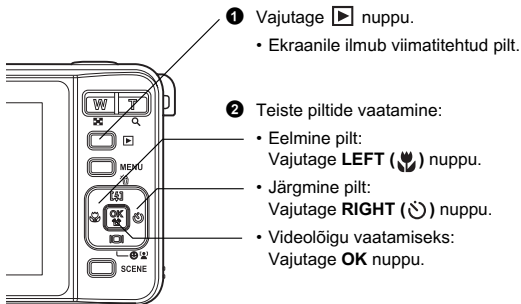Pildistusrežiimi muutmiseks valige sobiv Scene režiim.

Tehtud piltide vaatamine

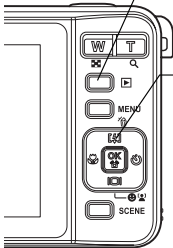


Piltide kustutamine

- 
- 1 Vajutage  nuppu, vajutage kustutavate piltide valimiseks **LEFT** () või **RIGHT** () nuppu.
- 2 Vajutage   nuppu.
- 3 Valige **THIS IMAGE / VIDEO** või **ALL IMAGES** (üks pilt või kõik pildid) ning vajutage **OK** nuppu.
- 4 Katkestamiseks valige **CANCEL** ja vajutage **OK** nuppu.

Aku laadimine

- 1 Paigaldage aku kaamerasse ning ühendage kaamera toitekaabel vooluadapteriga.
- 2 Ühendage aku laadimiseks vooluadapter seinakontaktiga.

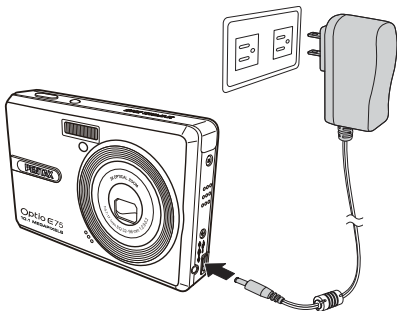

Tarkvara paigaldus



- 1 Asetage kaasasolev CD plaat CD-ROM seadmesse.
- 2 Seadistusmenüüs on neli valikut.
Valige soovitud tarkvara ning järgige paigaldamisel ekraanile ilmuvaid juhiseid.